

FIG. 39—Side Cowl Vent and Control Cable—Mustang and Cougar

four mounting plate nuts.

2. Connect the blower wire to the resistor.

3. Install the heater assembly as outlined in this section.

HEATER CORE— MUSTANG AND COUGAR

REMOVAL

1. Remove the heater assembly as outlined in this section.

2. Remove the air inlet seal from the heater assembly.

3. Remove eleven clips from the heater assembly flange and separate the heater assembly housing (Fig. 41).

4. Remove the heater core from the heater assembly housing.

INSTALLATION

1. Position the heater core in the heater assembly housing.

2. Assemble the heater assembly housing and install the eleven clips (Fig. 41).

3. Install the air inlet seal on the heater assembly.

4. Install the heater assembly in the vehicle as outlined in this section.

DEFROSTER NOZZLE—WITH FRESH AIR HEATER— MUSTANG AND COUGAR

REMOVAL

1. Remove the snap rivet retaining

the defroster nozzle to the heater plenum (Fig. 42).

2. Remove three nuts retaining the defroster nozzle to the instrument panel opening, and remove the defroster nozzle.

INSTALLATION

1. Position the defroster nozzle to the heater plenum and the defroster

openings. Install the three defroster nozzle retaining nuts.

2. Install the snap rivet retaining the defroster nozzle to the heater plenum.

DEFROSTER NOZZLE—WITH POWER VENTILATION HEATING SYSTEM—MUSTANG AND COUGAR

REMOVAL

1. Remove the power vent air duct as outlined in this section.

2. Remove the two nuts retaining the defroster nozzle to the defroster opening and remove the defroster nozzle.

INSTALLATION

1. Position the defroster nozzle to the defroster opening.

2. Install the two outer end defroster nozzle retaining nuts.

3. Install the power vent air duct.

HEATER ASSEMBLY— MUSTANG AND COUGAR

REMOVAL

1. Disconnect the battery ground cable.

2. Drain the cooling system.

3. Remove the instrument panel pad (Group 18).

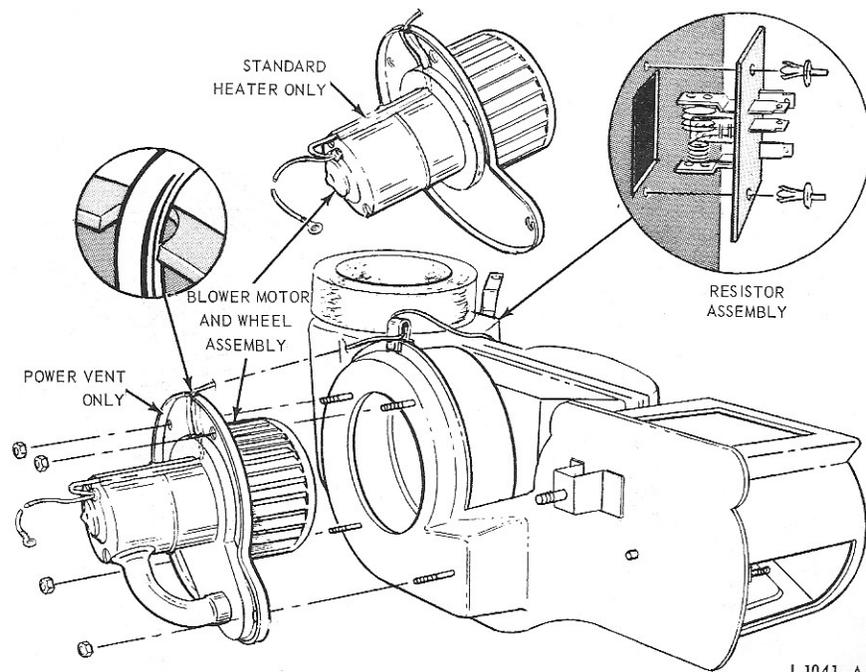


FIG. 40—Heater Blower and Motor Installation—Mustang and Cougar